

A3 Flip File Displays

Website Ref:
UKP16A3

Supplied:
1x Metal Wall Bracket
10x A3 Black Posting Sleeves

Overall Measurements:

Wall Bracket

Length = 460mm

Width = 80mm

See - Wall Bracket Image >>>>>>

Poster Sleeves

Length (Metal Edges) = 460mm

Length (Poster Sleeve) = 440mm

Width (Poster Sleeve) = 325mm

Opening (Poster Sleeve) = 10mm

Weight:

Overall 1kg (approx)

Designed for:

A3 Portrait Documents

Length = 420mm


Width = 297mm

Double-sided Sleeves - Hence hold 20x A3's

Finer Details:

1. Decide where you want to attach the metal bracket
2. Place the bracket against the wall and level it (use a spirit level)
3. Whilst holding the bracket to the wall, pencil mark the hole locations
4. Now secure the metal bracket using supplied raw plugs and screws
5. Now simply push the sleeve top metal section into the top 1st hole of the bracket
6. Now slightly bend the bottom metal section and insert into the 1st hole of the bracket
7. Repeat steps 5 and 6 for all remaining sleeves - Finally start adding your documents!


A3 "Black" Flip File Displays (10x Pockets)

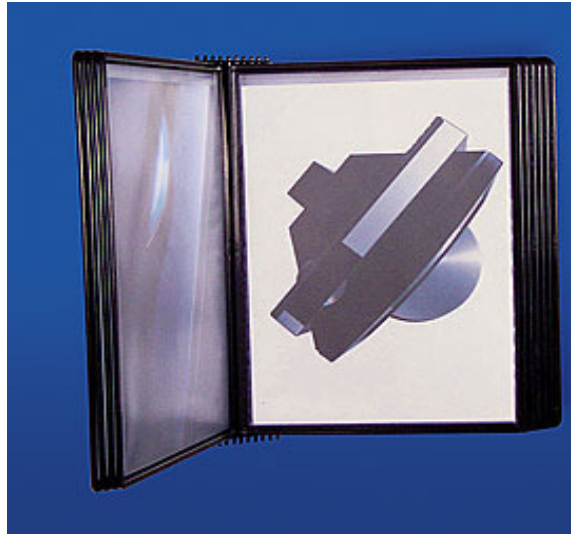

Wall Bracket



Poster Sleeve (notice the metal ends!)

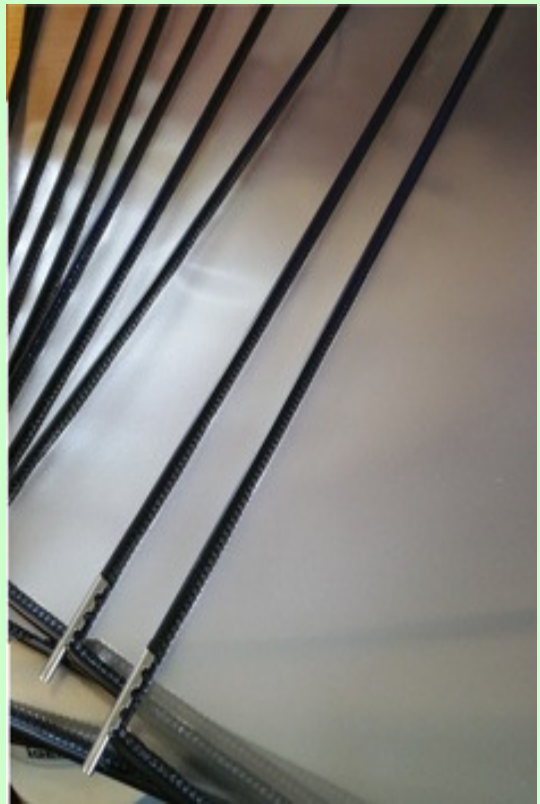

10x Document Sleeves supplied!
Check that you have 10x Sleeves!



Insert Top Metal Section
Metal top section has now been inserted



Insert Bottom Metal Section
Metal bottom section is now inserted

Sleeves with Metal Top and Bottom Pins

Metal pins help hold the sleeve onto the bracket
Metal pins also create max flexibility for adding and removing as necessary

Adding the Sleeves into the Bracket

1. Firstly - Make sure the opening on the sleeve is top most
2. Secondly - present the top metal pin into the top of the bracket
3. Thirdly - present the bottom metal pin into the bottom of the bracket (bend slightly)
4. Keep repeating steps 1,2 and 3 until all sleeves are added
5. Finally, now add your documents + when documents are out of date, simple swop them!

